

November 1986

An 8741AH/8041A Digital Cassette Controller

**JOHN BEASTON, JIM KAHN
PERIPHERAL APPLICATIONS**

Order Number: 231314-002

INTRODUCTION


The microcomputer system designer requiring a low-cost, non-volatile storage medium has a difficult choice. His options have been either relatively expensive, as with floppy discs and bubble memories, or non-transportable, like battery backed-up RAMs. The full-size digital cassette option was open but many times it was too expensive for the application. Filling this void of low-cost storage is the recently developed digital mini-cassette. These mini-cassettes are similar to, but not compatible with, dictation cassettes. The mini-cassette transports are inexpensive (well under \$100 in quantity), small (less than 25 cu. in.), low-power (one watt), and their storage capacity is a respectable 200K bytes of unformatted data on a 100-foot tape. These characteristics make the mini-cassette perfect for applications ranging from remote datalogging to program storage for hobbyist systems.

The only problem associated with mini-cassette drives is controlling them. While these drives are relatively easy to interface to a microcomputer system, via a parallel I/O port, they can quickly overburden a CPU if other concurrent or critical real-time I/O is required. The cleanest and probably the least expensive solution

in terms of development cost is to use a dedicated single-chip controller. However, a quick search through the literature turns up no controllers compatible with these new transports. What to do? Enter the UPI-41AH family of Universal Peripheral Interfaces.

The UPI-41AH family is a group of two user-programmable slave microcomputers plus a companion I/O expander. The 8741AH is the "flag-chip" of the line. It is a complete microcomputer with 1024 bytes of EPROM program memory, 64 bytes of RAM data memory, 16 individually programmable I/O lines, an 8-bit event counter and timer, and a complete slave peripheral interface with two interrupts and Direct Memory Access (DMA) control. The 8041A is the masked ROM, pin compatible version of the 8741AH. Figure 2 shows a block diagram common to both parts. The 8243 I/O port expander completes the family. Each 8243 provides 16 programmable I/O lines.

Using the UPI concept, the designer can develop a custom peripheral control processor for his particular I/O problem. The designer simply develops his peripheral control algorithm using the UPI-41AH assembly language and programs the EPROM of the 8741AH. Voila!

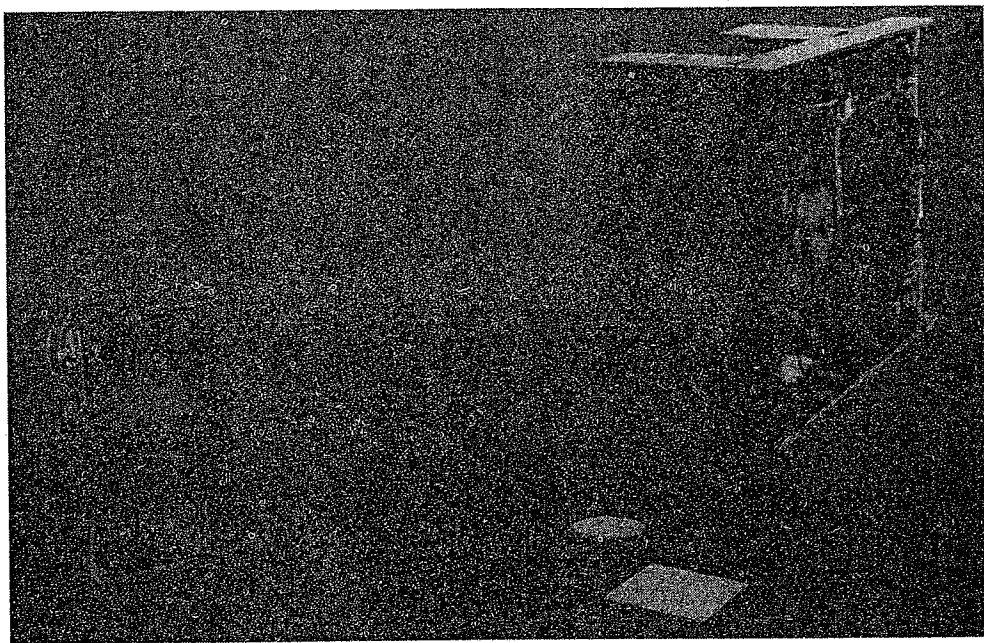

231314-1

Figure 1. Comparison of Mini-Cassette and Floppy Disk Transports and Media

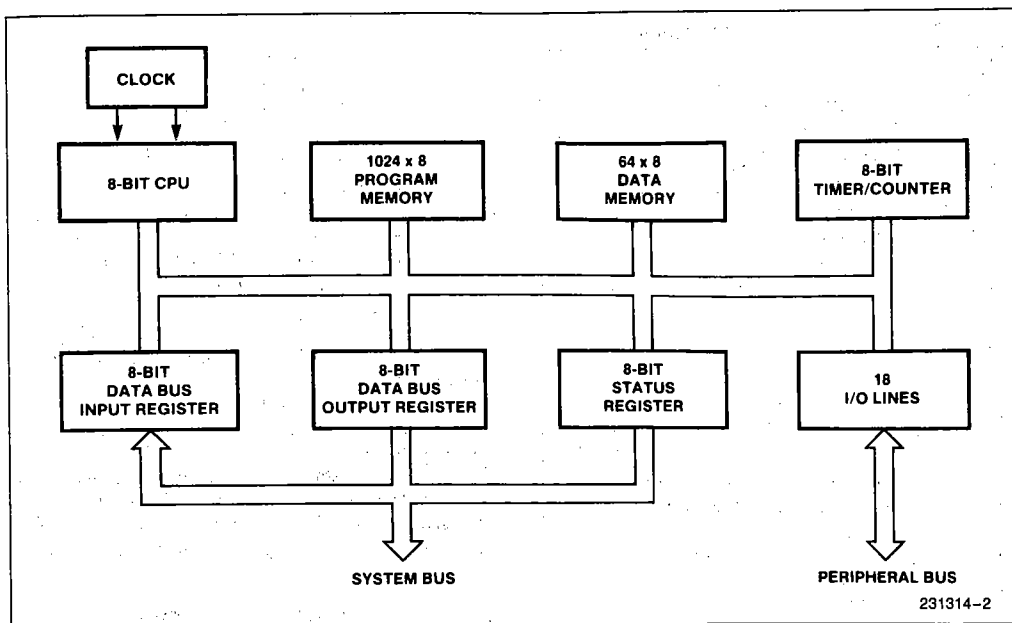


Figure 2. 8741AH/8041A Block Diagram

He has a single-chip dedicated controller. Testing may be accomplished using either an ICE-41A or the Single-Step mode of the 8741AH. UPI-41AH peripheral interfaces are being used to control printers, keyboards, displays, custom serial interfaces, and data encryption units. Of course, the UPI family is perfect for developing a dedicated controller for digital mini-cassette transports. To illustrate this application for the UPI family let's consider the job of controlling the Braemar CM-600 Mini-Dek*.

THE CM-600 MINI-DEK*

The Braemar CM-600 is representative of digital mini-cassette transports. It is a single-head, single-motor transport which operates entirely from a single 5V power supply. Its power requirements, including the motor, are 200 mA for read or write and 700 mA for rewind. Tape speeds are 3 inches per second (IPS) during read or write, 5 IPS fast forward, and 15 IPS rewind. With these speeds and a maximum recording density of 800 bits per inch (BPI), the maximum data rate is 2400 bits per second (BAUD). The data capacity using both sides of a 100-foot tape is 200K bytes. On top of this, the transport occupies only 22.5 cubic inches (3" x 3" x 2.5").

*MiniDek is a registered trademark of Braemar.

All I/O for the CM-600 is TTL-compatible and can be divided into three groups: motor control, data control, and cassette status. The motor group controls are GO/STOP, FAST/SLOW, and FORWARD/REVERSE. The data controls are READ/WRITE, DATA IN, and DATA OUT. The remaining group of outputs give the transport's status: CLEAR LEADER, CASSETTE PRESENCE, FILE PROTECT, and SIDE SENSOR. These signals, shown schematically in Figure 3 and Table 1, give the pin definition of the CM-600 16-pin I/O connector.

RECORDING FORMAT

The CM-600 does not provide either encoding or decoding of the recorded data; that task is left for the peripheral interface. A multitude of encoding techniques from which the user may choose are available. In this single-chip dedicated controller application, a "self-clocking" phase encoding scheme similar to that used in floppy discs was chosen. This scheme specifies that a logic "0" is a bit cell with no transition; a cell with a transition is a logic "1."

Table 1. CM-600 I/O Pin Definition

Pin	I/O	Function
1	—	Index pin—not used
2	—	Signal ground
3	O	Cassette side (0—side B, 1—side A)
4	I	Data input (0—space, 1—mark)
5	O	Cassette presence (0—cassette, 1—no cassette)
6	I	Read/Write (0—read, 1—write)
7	O	File protect (0—tab present, 1—tab removed)
8	—	+5V motor power
9	—	Power ground
10	—	Chassis ground
11	I	Direction (0—forward, 1—rewind)
12	I	Speed (0—fast, 1—slow)
13	O	Data output (0—space, 1—mark)
14	O	Clear leader (0—clear leader, 1—off clear leader)
15	I	Motion (0—go, 1—stop)
16	—	+5V logic power

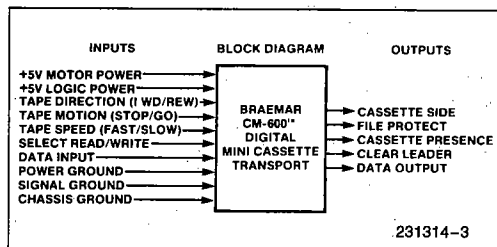


Figure 3. Braemar CM-600 Block Diagram

Figure 4 illustrates the encoding of the character 3AH assuming the previous data ended with the data line high. (The least significant bit is sent first.) Notice that there is always a "clocking" transition at the beginning of each cell. Decoding is simply a matter of triggering on this "clocking" transition, waiting $\frac{3}{4}$ of a bit cell time, and determining whether a mid-cell transition has occurred. Cells with no mid-cell transitions are data 0's; cells with transitions are data 1's. This encoding technique has all the benefits of Manchester encoding with the added advantage that the encoded data may be "decoded by eyeball:" long cells are always 0's, short cells are always 1's.

Besides the encoding scheme, the data format is also up to the user. This controller uses a variable byte length, checksum protected block format. Every block starts and ends with a SYNC character (AAH), and the character immediately preceding the last SYNC is the

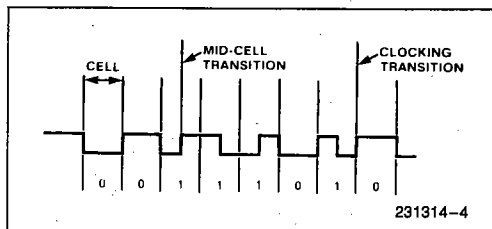


Figure 4. Modified Phase Encoding of Character 3A Hex

checksum. The checksum is capable of catching 2 bit errors. The number of data characters within a block is limited to 64K bytes. Blocks are separated by an Inter-Record Gap (IRG). The IRG is of such a length that the transport can stop and start within an IRG, as illustrated in the data block timing, Figure 5. Braemar specifies a maximum start or stop time of 150 ms for the transport, thus the controller uses 450 ms for the IRG. This gives plenty of margin for controlling the transport and also for detecting IRGs while skipping blocks.

THE UPI-41AHTM CONTROLLER

The goal of the UPI software design for this application was to make the UPI-41AH microcomputer into an intelligent cassette control processor. The host processor (8086, 8088, 8085A, etc.) simply issues a high-level command such as READ-a-block or WRITE-a-block. The 8741AH accepts the command, performs the requested operation, and returns to the host system a result code telling the outcome of the operation, eg. Good-Completion, Sync Error, etc. Table 2 shows the command and result code repertoire. The 8741AH completely manages all the data transfers for reading and writing.

As an example, consider the WRITE-a-block command. When this command is issued, the UPI-41AH expects a 16-bit number from the host telling how many data bytes to write (up to 64K bytes per block). Once this number is supplied in the form of two bytes, the host is free to perform other tasks; a bit in the UPI's STATUS register or an interrupt output will notify the host when a data transfer is required. The 8741AH then checks the transport's status to be sure that a cassette is present and not file protected. If either is false, a result code is returned to the host; otherwise the transport is started. After the peripheral controller checks to make sure that the tape is off the clear leader and past the hole in the tape, it writes a 450 ms IRG, a SYNC character, the block of data, the checksum, and the final SYNC character. (The tape has a clear leader at both ends and a small hole 6 inches from the end of each leader.) The data transfers from the host to the

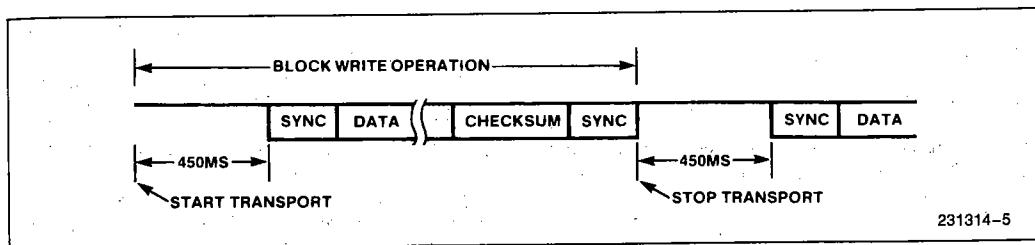


Figure 5. IRG/Block Timing Diagram (not to scale)

Table 2. Controller Command/Result Code Set

Command	Result
Read (01H)	Good-Completion (00H) Buffer Overrun Error (41H) Bad Synch1 Error (42H) Bad Synch2 Error (43H) Checksum Error (44H) Command Error (45H) End of Tape Error (46H)
Rewind (04H)	Good-Completion (00H)
Skip (03H)	Good-Completion (00H) End of Tape Error (47H) Beginning of Tape Error (48H)
Write (02H)	Good-Completion (00H) Buffer Underrun Error (81H) Command Error (82H) End of Tape Error (83H)

UPI-41AH slave microcomputer are double buffered. The controller requests only the desired number of data bytes by keeping track of the count internally.

If nothing unusual happened, such as finding clear leader while writing, it returns a Good-Completion result code to the host. If clear leader was encountered, the transport is stopped immediately and an End-of-Tape result code is returned to the host. Another possible error would be if the host is late in supplying data. If this occurs, the controller writes an IRG, stops the drive, and returns the appropriate Data-Underrun result code.

The READ-a-block command also provides error checking. Once this command is issued by the host, the controller checks for cassette presence. If present, it starts the transport. The data output from the transport is then examined and decoded continuously. If the first

character is not a SYNC, that's an error and the controller returns a Bad-First-SYNC result code (42H) after advancing to the next IRG. If the SYNC is good, the succeeding characters are read into an on-chip 30 character circular buffer. This continues until an IRG is encountered. When this occurs, the transport is stopped. The controller then tests that it is the last character. If it is a SYNC, the controller then compares the accumulated internal checksum to the block's checksum, the second to the last character of the block. If they match, a Good-Completion result code (00H) is returned to the host. If either test is bad, the appropriate error result code is returned. The READ command also checks for the End-of-Tape (EOT) clear leader and returns the appropriate error result code if it is found before the read operation is complete.

The 30 character circular buffer allows the host up to 30 character times of response time before the host must collect the data. All data transfers take place thru the UPI-41AH Data Bus Buffer Output register (DBBOUT). The controller continually monitors the status of this register and moves characters from the circular buffer to the register whenever it is empty.

The SKIP-n-blocks command allows the host to skip the transport forward or backward up to 127 blocks. Once the command is issued, the controller expects one data byte specifying the number of blocks to skip. The most significant bit of this byte selects the direction of the skip (0 = forward, 1 = reverse). SKIP is a dual-speed operation in the forward direction. If the number of blocks to skip is greater than 8, the controller uses fast-forward (5 IPS until it is within 8 blocks of the desired location. Once within 8 blocks, the controller switches to the normal read speed (3 IPS) to allow accurate placement of the tape. The reverse skip uses only the rewind speed (15 IPS). Like the READ and WRITE commands, SKIP also checks for EOT and beginning-of-tape (BOT) depending upon the tape's direction. An error result code is returned if either is

encountered before the number of blocks skipped is complete.

The REWIND command simply rewinds the tape to the BOT clear leader. The ABORT command allows the termination of any operation in progress, except a REWIND. All commands, including ABORT, always leave the tape positioned on an IRG.

THE HARDWARE INTERFACE

There's hardly any hardware design effort required for the controller and transport interface in Figure 6. Since the CM-600 is TTL compatible, it connects directly to the I/O ports of the UPI controller. If the two are separated (i.e. on different PC cards), it is recommended that TTL buffers be provided. The only external circuitry needed is an LED driver for the DRIVE ACTIVE status indicator.

The 8741AH-to-host interface is equally straightforward. It has a standard asynchronous peripheral interface: 8 data lines (D₀-D₇), read (RD), write (WR), register select (AO), and chip select (CS). Thus it connects directly to an 8086, 8088, 8085A, 8080, or 8048 bus structure. Two interrupt outputs are provided for data transfer requests if the particular system is interrupt-driven. DMA transfer capability is also available. The clock input can be driven from a crystal directly or with the system clock (6 MHz max). The UPI-41AH clock may be asynchronous with respect to other clocks within the system.

This application was developed on an Intel iSBC 80/30 single board computer. The iSBC 80/30 is controlled by an 8085A microprocessor, contains 16K bytes of dual-ported dynamic RAM and up to 8K bytes of either EPROM or ROM. Its I/O complement consists of an 8255A Programmable Parallel Interface, an 8251A Programmable Communications Interface, an 8253 Programmable Interval Timer, and an 8259A Programmable Interrupt Controller. The iSBC 80/30 is especially convenient for UPI development since it contains an uncommitted socket dedicated to either an 8041A or 8741AH, complete with buffering for its I/O ports. The iSBC 80/30 to 8741AH interface is reflected in Figure 8. (Optionally, an iSBC 569 Digital Controller board could be used. The iSBC 569 board contains three uncommitted UPI sockets with an interface similar to that in Figure 8.)

Looking at the host-to-controller interface, the host sees the 8741AH as three registers in the host's I/O address space: the data register, the command register, and the status register. The decoding of these registers is shown in Figure 7. All data and commands for the controller are written into the Data Bus Buffer Input register (DBBIN). The state of the register select input, AO, determines whether a command or data is written. (Writes with AO set to 1 are commands by convention.) All data and results from the controller are read by the host from the Data Bus Buffer Output register (DBBOUT).


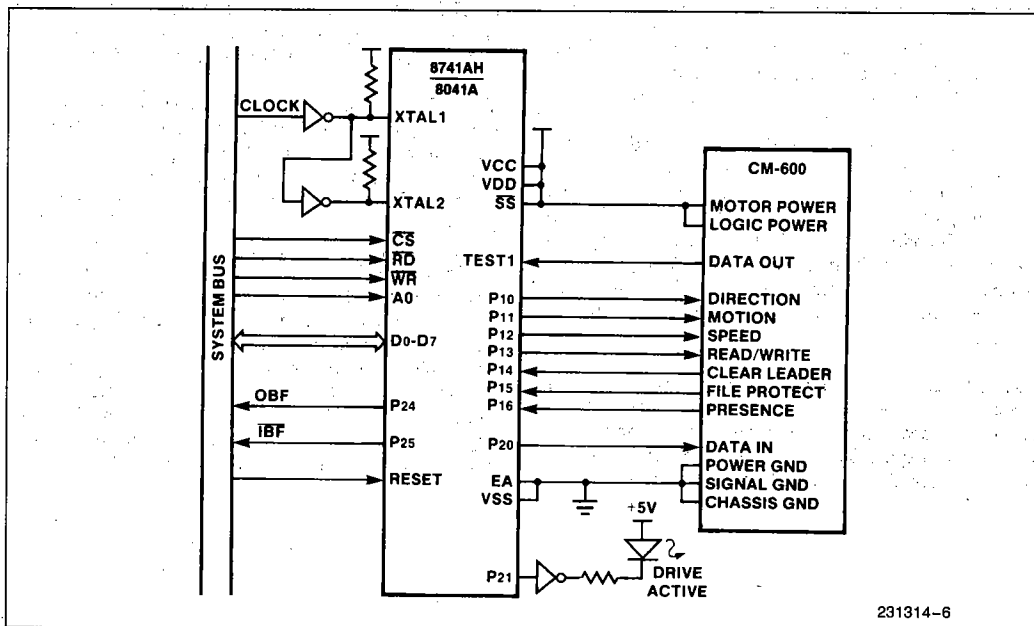


Figure 6. Controller/Transport System Schematic

\overline{CS}	\overline{RD}	\overline{WR}	A0	Register
0	0	1	0	DBBOUT
0	0	1	1	STATUS
0	1	0	0	DBBIN (DATA)
0	1	0	1	DBBIN (COMMAND)
1	X	X	X	NONE

Figure 7. 8741AH/8041A Interface Register Decoding

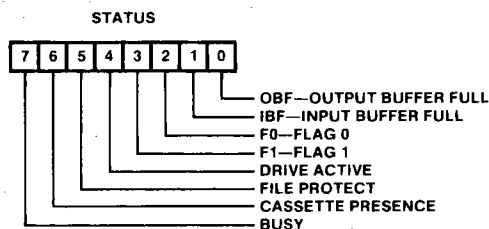

231314-7

Figure 8. Status Register Bit Definition

The Status register contains flags which give the host the status of various operations within the controller. Its format is given in Figure 8. The Input Buffer Full (IBF) and Output Buffer Full (OBF) flags show the Status of the DBBIN and DBBOUT registers respectively. IBF indicates when the DBBIN register contains data written by the host. The host may write to DBBIN only when IBF is 0. Likewise, the host may read DBBOUT only when OBF is set to a 1. These bits are handled automatically by the UPI-41AH internal hardware. FLAG 0 (F₀) and FLAG 1 (F₁) are general purpose flags used internally by the controller which have no meaning externally.

The remaining four bits are user-definable. For this application they are DRIVE ACTIVE, FILE PROTECT, CASSETTE PRESENCE, and BUSY flags. The FILE PROTECT and CASSETTE PRESENCE flags reflect the state of the corresponding I/O lines from the transport. DRIVE ACTIVE is set whenever the transport motor is on and the controller is performing an operation. The BUSY flag indicates whether the contents of the DBBOUT register is data or a result code. The BUSY flag is set whenever a command is issued by the host and accepted by the controller. As long as BUSY

is set, any character found in DBBOUT is a result code. Thus whenever the host finds OBF set, it should test the BUSY flag to determine whether the character is data or a result code.

Notice the OBF and \overline{IBF} are available as interrupt outputs to the host processor, Figure 6. These outputs are self-clearing, that is, OBF is set automatically upon the controller loading DBBOUT and cleared automatically by the host reading DBBOUT. Likewise IBF is cleared to a 0 by the host writing into DBBIN: set to a 1 when the controller reads DBBIN into the accumulator.

The flow charts of Figure 9 show the flow of sample host software assuming a polling software interface between the host and the controller. The WRITE command requires two additional count bytes which form the 16-bit byte count. These extra bytes are "hand-shaked" into the controller using the IBF flag in the STATUS register. Once these bytes are written, the host writes data in response to IBF being cleared. This continues until the host finds OBF set indicating that the operation is complete and reads the result code from DBBOUT. No testing of BUSY is needed since only the result code appears in the DBBOUT register.

The READ command does require that BUSY be tested. Once the READ command is written into the controller, the host must test BUSY whenever OBF is set to determine whether the contents of DBBOUT is data from the tape or the result code.

THE CONTROLLER SOFTWARE

The UPI-41AH software to control the cassette can be divided up into various commands such as WRITE, READ and ABORT. In a previous version of this application note (May 1980), software was described that implemented these commands. This code however did not adequately compensate for speed variations of the motor during record and playback nor for data distortion caused by the magnetic media. Since then, a new code has been written to include these effects. This revised software is now available through the INTEL User's Library, INSITE. For more information on this software or INSITE, contact your local INTEL Sales Office.